 
 
 
 
 
 
 
 
 
 
 
 
 
 


 
 
 
 
 
 
 
 
RT-3700 SPARE PARTS

NO	PARTS NAME	set	picture
R37100	Cover Set	#101~133 Assembly	
R37101	Cover LH		
102	Name plate LH		
103	Brake roller		
104	Brake roller pin		
105	Brake spring		
106	Roller braker		
107	Fix nut		
108	Cover RH		
109	Name plate RH		
110	Control knob		
111	Stopper A		
112	Stopper B		
113	Stopper cover		
114	Fix screw		
115	Divide Adj. cam		
116	Length Adj. cam		

 
 
 
 
 
 
 
 
RT-3700 SPARE PARTS

NO	PARTS NAME	set	picture
117	Length Adj. lever		
118	Length Adj. lever shaft		
119	Wide Adj. shaft		
120	Wide control plate		
121	Wide control stopper		
122	Coil spring		
123	Wide control cap		
124	Guide roller		
125	Guide roller shaft		
126	Tape guide plate		
127	Fix screw		
128	Safety hanger		
129	Safety hanger plate spring		
130	Safety hanger coil spring		
131	Support stand		
132	Safety cover		
133	Coil spring		

 
 
 
RT-3700 SPARE PARTS

NO	PARTS NAME	set	picture
134	Support stand rubber		
200	Disc Set	#201~211, #213~220 Assembly	
201	Disc frame		
202	Auto senser body		
203	Auto senser PCB		
204	Auto Senser wave spring		
205	Wave washer		
206	Rotater latch gear		
207	Rotater latch plate		
208	Rotater latch		
209	Rotater jointer		
210	Disc		
211	Fix screw		
212	Control Board		
213	Fix screw		
214	Button flange		
215	Button spring		

 
 
 
 
 
RT-3700 SPARE PARTS

NO	PARTS NAME	set	picture
216	Button body		
217	Button spacer		
218	Button switch		
219	Button retainer		
220	Disc label		
300	Blade Unit Set	#301~329 Assembly	
301	Upper Blade body	#301~302 Assembly	
302	Ring metal		
303	Rubber stamp		
304	Upper blade		
305	Fix screw		
306	Tape bite		
307	Tape bite rod		
308	Tape bite rod pin		
309	Tape bite shaft		
310	Upper Blade pull Spring		
311	Blade unit housing		

 
 
 
RT-3700 SPARE PARTS

NO	PARTS NAME	set	picture
312	Lower blade exchange lever		
313	Slider support		
314	Lower blade slider		
315	Lower blade plate spring		
316	Fix screw		
317	Lower blade		
318	Lower blade bush		
319	1'st cam		
320	2'nd cam		
321	3'rd cam		
322	4'th cam		
323	5'th cam		
325	Cam shaft		
326	Cam shaft nut		
327	Housing spring		
328	Tape bite rod lever		
329	Laver guide		

 
 
 
 
 
 
RT-3700 SPARE PARTS

NO	PARTS NAME	set	picture
400	Main frame Set	#401~450 Assembly	
401	Main frame		
402(S)	Inward lever Ass'y	402~411 Assembly	
402	Inward lever		
403	Inward lever bush		
404	Inward lever roller		
405	Inward lever roller pin		
406	Inward lever guide roller		
407	Inward lever guide roller pin		
408	Inward lever guide roller housing		
409	Nut		
410	Coil spring		
411	Fix screw		
412	Reverse lever		
413	Inward lever shaft		
414	Cam shaft fix metal		
415	Fix screw		

RT-3700 SPARE PARTS

NO	PARTS NAME	set	picture
416	DC Geared motor		
417	DC Geared motor harness		
418	DC Geared motor cushion cap		
419	Fix screw		
420	Divide Adj. lever		
420-1	Divide Adj. lever Ring		
421	Fix screw		
422	Safety sensor PCB		
423	Safety sensor lever		
424	Safety sensor lever spring		
425	Lead sensor PCB		
426	Rotator lever		
427	Rotator lever torshion spring		
428	Gear shaft		
429	Motor gear		
430	Middle gear		
431	Main gear		

RT-3700 SPARE PARTS

NO	PARTS NAME	set	picture
432	Fix screw		
433	Gear box		
434	Spacer		
435	Fuse holder		
436	Fuse		
437	Power switch		
438	Bottom cover		
439	Cord holder		
440	Cushion rubber		
441	Fix screw		
442	Fix screw		
443	Power board		
444	24V joint wire		
445	Input wire		
446	Fuse joint wire		
447	Power Cord		
448	Sensor lever bracket		

RT-3700 SPARE PARTS

NO	PARTS NAME	set	picture
449	Cam shaft bush		
450	Fix screw		